


## Assemble and Care Instructions for Kerosene Lamp (with electric burner)

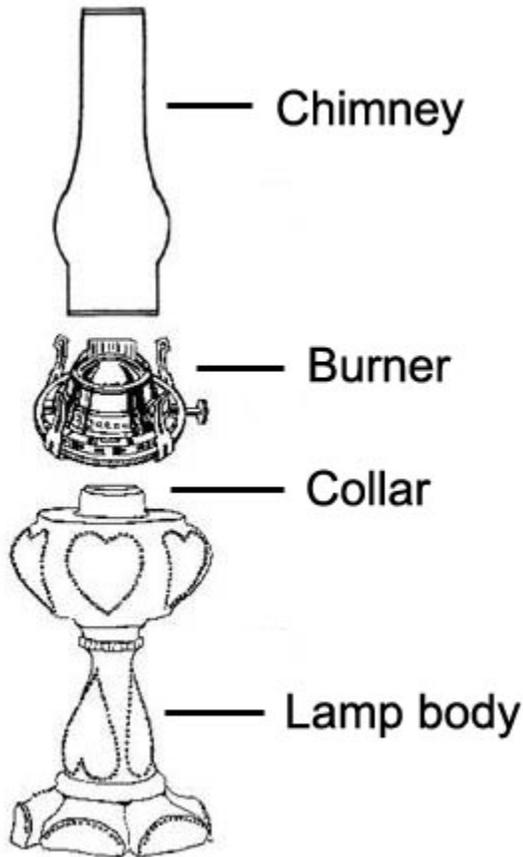

### Assembling the Lamp:

1.) Inspect the lamp body and chimney condition, making sure there are no cracks, chips, or other conditions which would make the lamp unfit for use. Inspect the burner for proper function (make sure the cord does not have thin spots or exposed wire).

2.) Attach burner to lamp body. Your burner will thread onto the lamp body. **The burner may have an extra collar attached on the bottom. This superfluous collar should be removed.** Attach the burner to the lamp (collar) by slowly turning the burner in a clock-wise manner while lightly and evenly pressing down. A good burner-to-collar fit will be characterized by smoothly turning threads and a snug fit when the base of the burner threads fully fit into the top of the collar.

3.) Install light bulb. **Do not exceed recommended wattage. Make sure the bulb will fit into the bottom of the chimney.**

4.) Mount the chimney by slipping its base inside the springy tines that rise above the

burner. Try to apply light pressure to the tines as the chimney goes down so that the chimney will be held in center of the burner. If the tines are bent, lightly bend them back to perpendicular so that all 4 tines apply equal pressure on the chimney base.

Maintenance - Proper Maintenance is the key to longevity and proper operation of the lamp.

1.) Cord condition – Make sure the cord is not positioned to create a trip hazard. Do not pinch, crimp, or strip the cord for any reason. If any wire should become exposed, the cord should not be used for any reason.

2.) Chimney Temperature – The chimney should not be exposed to extreme changes in temperature. Placing a cold chimney on a warm bulb can cause the chimney to crack or even shatter.

3.) Bulbs – Do not exceed the recommended wattage. Use only Edison base bulbs.