



USER INSTRUCTIONS

1. FUEL

The recommended fuels for this Dietz Lantern -Common lamp oil, clear citronella oil and kerosene .

WARNING: DO NOT USE GASOLINE or ETHYL ALCOHOL.

2. FILLING THE LANTERN

Do not fill lantern more than 85% full, unless maximum burning time is required. Overfilling the lantern may cause the fuel to spill out of burner socket onto inner air chamber plate and leak out the side tube joint, which creates the impression the lantern is leaking.

3. LIGHTING THE LANTERN

Push down on lever (Illustration #1) to raise globe, exposing the wick. Light the wick while the globe is raised. Raise lever back to original position, lowering the globe. After the wick is lit, it should be adjusted to no more than 1/16" above the flame plate. As the lantern warms to operating temperature, the flame will increase in size. Five minutes after lighting, the flame may be adjusted to provide maximum illumination. If the wick is set too high, smoking will occur, which means soot will be deposited on the globe.


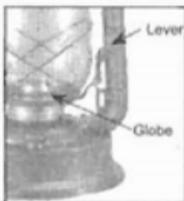


Illustration #1

4. TRIMMING THE WICK Our lanterns are shipped from the factory with wicks properly trimmed. With steady use the wick will need trimming occasionally. Trim off charred tip with sharp scissors so that the top of wick is flat and square: making right angles at the corners.

5. CHANGING THE CHIMNEY

Grasp the bail and lift up on the chimney ring (Illustration #2). Tilt the globe away from the filler cap to horizontal position and take out the chimney.

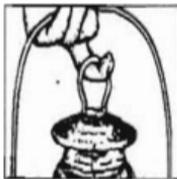

6. CAUTION

- **Keep away from small children -This is not a toy.**
- Glass globe and chimney cap will become hot during use.
- This lantern should not be left unattended when lit.
- To put on a plane surface, to hang by the handle.
- **To switch off: lower the wick until extinction of the flame.**